



USER'S MANUAL

Part 2

Traditional Telephone 100

Wall and Table

*Please also read **Part 1** —
Important Product Information.*



 
For Customer Service Or Product
Information, Visit Our Website At
www.telephones.att.com

AT&T and the globe symbol are registered trademarks of AT&T Corp.
licensed to Advanced American Telephones.

© 2000 Advanced American Telephones. All rights reserved.
Printed in China. 850003047 Issue 1AT&T 5/00

PARTS CHECKLIST

Remember to save your sales receipt in case you ever need warranty service, and make sure this telephone package includes the items shown below:

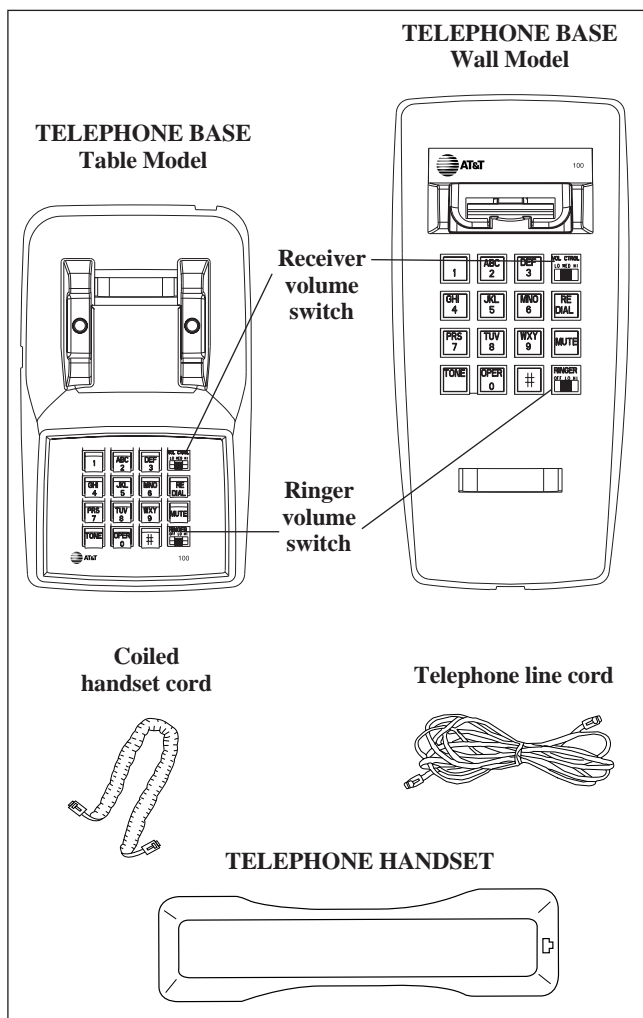


Dial Mode

This telephone has a selectable push-button dial and will work with either tone or rotary telephone service.

TABLE/DESK INSTALLATION

1. Set Dial Mode switch

 This product comes set in the tone (TT) mode. Make sure you choose the correct dialing method (TT/DP); touch tone dialing will not work if you have dial pulse service.

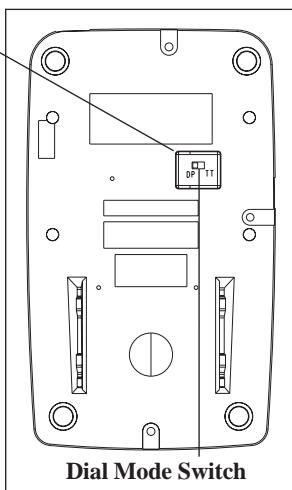


2. Connect line cord to telephone and wall jack

Plug one end of the line cord into the jack on the telephone and the other end of the line cord into a modular wall jack. Make sure it snaps firmly into place.

3. Connect handset to telephone base

 
Plug one end of the coiled handset cord into the jack at the side of the telephone base and plug the other end into the handset. Then hang up.

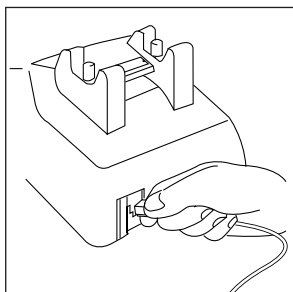

4. Check for dial tone

Lift the handset and listen for a dial tone. If you can't hear a dial tone, refer to "In Case of Difficulty" and try to correct the problem.

 TO DISCONNECT the line and handset cords, squeeze the clip on the modular plug and pull it out of the jack.

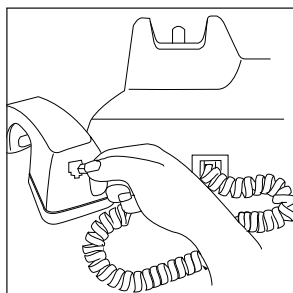

WALL INSTALLATION

1. Set Dial Mode switch

This product comes set in the tone (TT) mode. Make sure you choose the correct dialing method (TT/DP); touch tone dialing will not work if you have dial pulse service.

2. Connect the line cord and install telephone on wall jack

Plug the three-inch line cord into the back of the telephone and into a modular wall jack. Then align the mounting slots on the back of the telephone with the studs on the wall jack. Push the telephone firmly against the wall jack, and pull down until it is held securely by the mounting studs.

 
 
 
3. Connect handset to telephone base

Plug one end of the coiled handset cord into the handset. Plug the other end into the jack at the base of the phone. Then hang up.

4. Check for dial tone

Lift the handset and listen for a dial tone. If you can't hear a dial tone, refer to "In Case of Difficulty" and try to correct the problem.

TO DISCONNECT the line and handset cords, squeeze the clip on the modular plug and pull it out of the jack.

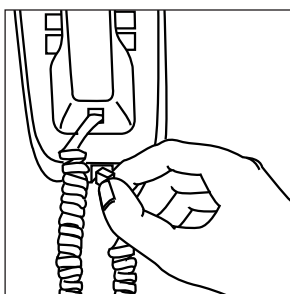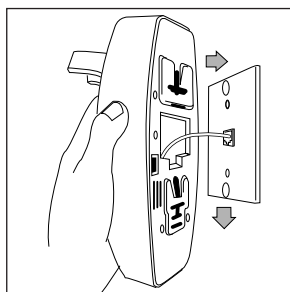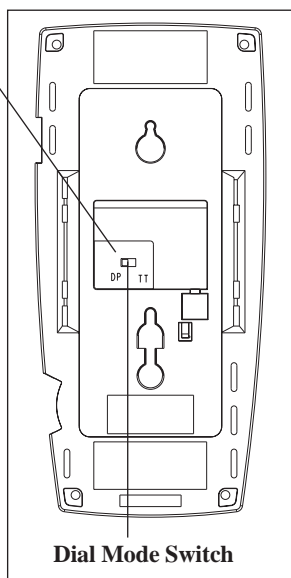

OPERATION

Receiver Volume Control

The Receiver Volume Control can be adjusted for a comfortable listening level. The switch has variable volume positions.

Redial

The telephone always stores in memory the last phone number dialed. To dial the same number again, lift the handset and press **REDIAL**.

Erasing Redial

For privacy, you can erase the redial memory. Lift the handset, then press any digit (1-9).

Mute

Hold down **MUTE** to turn off the handset microphone. You can then talk privately to someone else in the room without the person on the phone hearing you. You will still be able to hear the other person, but anything you say will not be heard. When you release the button, your caller will again be able to hear your voice.

Ringer Volume Control

 
The RINGER switch allows you to turn the telephone ringer OFF, or set it to ring at LO or HI volume. You can dial or answer calls normally when the ringer is off. Other telephones in your home will still ring; they are not affected by the switch.

Temporary Tone Dialing

Temporary tone dialing is used only when you have rotary service. This is useful if you need to send tone signals for access for telephone banking or long-distance services.

To change from pulse (rotary) to tone dialing during a call:

1. With the Dial Mode switch set to DP (dial pulse), dial a telephone number.
2. Press **TONE***; all buttons pressed after this will send tone signals.
3. After you hang up, the phone automatically returns to rotary service.

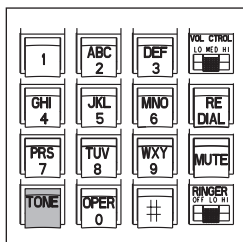

IN CASE OF DIFFICULTY

If you have difficulty operating this phone, try the suggestions below.

No Dial Tone

- ☞ Make sure all plugs are connected properly. Inspect the line cord connections at the modular jack and at the telephone. Also inspect the coiled handset cord connections at both ends.
- ☞ Unplug the telephone and connect it to another modular jack. If it still does not work, try another telephone; if neither telephone works, the problem is not in this telephone. The trouble may be caused by local telephone company lines, central office equipment, or the wiring in your home.

Calls Cannot Be Dialed, Or Are Dialed Slowly

This product comes set in the tone (TT) mode. Make sure you choose the correct dialing method (TT/DP); touch tone dialing will not work if you have dial pulse service.

Telephone Does Not Ring

- ☞ Make sure the RINGER Volume switch is not set to OFF.
- ☞ If there are several other phones on the same line, try disconnecting some of the other telephones. Having too many telephones can also create problems such as low ringer volume or impaired quality during calls.

Other Problems

For customer service, visit our website at www.telephones.att.com or call 1 800 222-3111.

Please retain your receipt as your proof of purchase.